Instructions

OPERATION Scupper PLUG

Step 1

Remove containment equipment from storage bin prior to fueling your vessel.

Step 2

Insert sorbent pillows tightly into freeing ports - No gaps! Secure pillows in place with wooden scupper boards.

Step 3

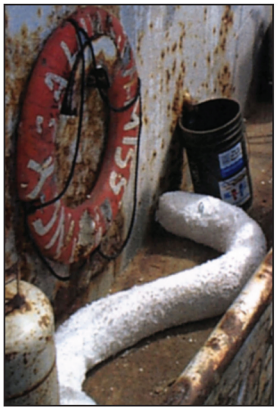

Place spare pads / sorbent material around fuel fill to capture any fuel spilled on deck.

Step 4

Place five-gallon buckets under fuel tank vents.

Step 5: Begin Fueling & Stay Alert!

Step 6: Return Equipment to Storage Bin.

Keep in Mind...

- State & federal oil pollution civil penalties may be reduced or waived if appropriate spill prevention measures are taken.
- Report missing, damaged or contaminated equipment to the dock.

Texas General Land Office
George P. Bush, Commissioner
P.O. Box 12873
Austin, Tx 78711-2873
glo.texas.gov

If You Spill Fuel:

- Secure fueling operation.
- Notify dock.
- Properly dispose of soiled sorbents.
- You are responsible for replacing soiled equipment.
- If fuel enters the water notify:

Texas General Land Office
800.832.8224 (24 HR SPILL NUMBER)
U.S. Coast Guard
800.424.8802